

Ryeford Arch

ISSUE 0114

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

Check all parts are present prior to assembly.

- Always pre-drill timber to avoid splitting.
- The timber in this product is pressure treated to ensure longevity and protection against rot. This may leave colour variations, but these will even out as the moisture content stabilises.
- Timber is a natural material and will shrink and swell as a result of varying moisture content.
- Keep all plastic bags and parts away from children.

Technical Help line: 0844 248 9853
8:30am - 5.00pm Monday to Friday

In line with your statutory rights, please check all parts prior to assembly, as assembly of damaged parts may be deemed to be acceptance and this may affect the remedies you are entitled to. If the product is not constructed in accordance with the instructions, or is altered in anyway (e.g. painted), the manufacturer cannot be held liable for any resulting damage.

REQUIRED TOOLS:
(NOT SUPPLIED)

TAPE MEASURE

SPIRIT LEVEL

DRILL

POZI DRIVE SCREWDRIVER

PARTS

A HRGATREL Qty 2
B HRGANPLH Qty 2
C HRGANPRH Qty 2
D HRGALA Qty 1
E HRGANR Qty 5
F HRGALAWMB Qty 1

Fixing Pack (HRGAFP) :


QTY 8
40mm

QTY 18
60mm

NOT TO SCALE


For further information

www.forestgarden.co.uk

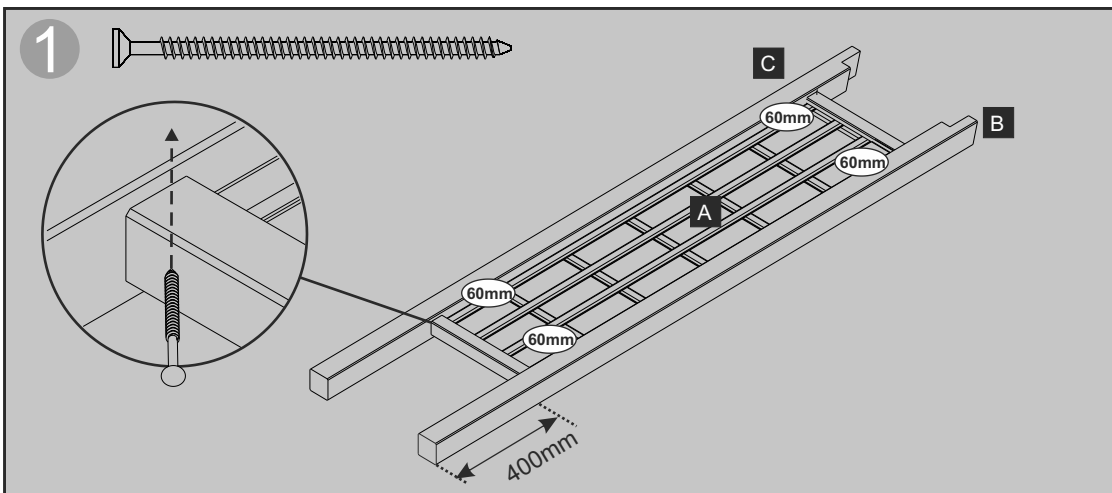


Lay 1 x B and 1 x C posts on the ground with both notches facing inwards. Position the trellis 400mm up from bottom of the posts (the flat ends). Secure the trellis to the posts using 4 x 60mm screws through the top and bottom of the framework. Repeat procedure to connect remaining trellis and posts.

This article contains biocidal products to give protection against wood destroying insects & wood rotting fungi. Contents may vary.
 May contain : Basic copper carbonate (Copper (II) carbonate – Copper (II) hydroxide (1:1), Cupric oxide, Copper hydroxide carbonate, oxyethyl, ammoniumpropionate, Copper HDO, Propiconazole, Tebuconazole, Boric acid, Benzalkonium chloride.
 Wear gloves when handling freshly treated wood. Avoid breathing dust when cutting treated or untreated wood. Dispose of off-cuts responsibly – do not burn.

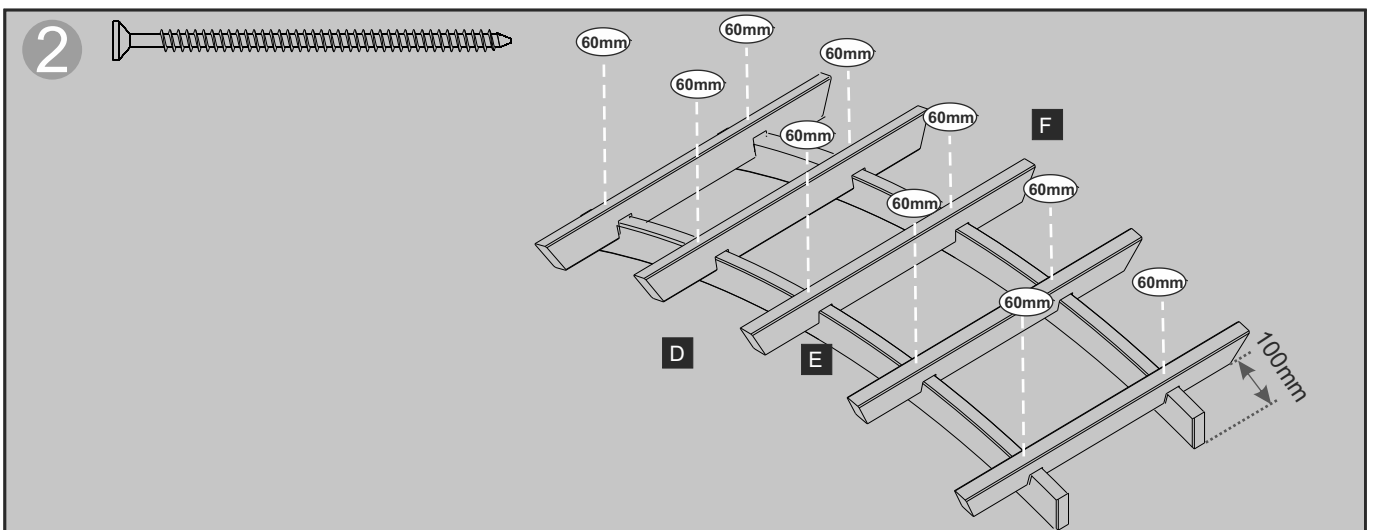

Space the notched rafters (HRGANR) equally across the arched rafters (HRGALA and HRGALAWMB) Make sure that the outer notched rafters are no more than 100mm in from the end of the arched rafters. Secure with 60mm screws.

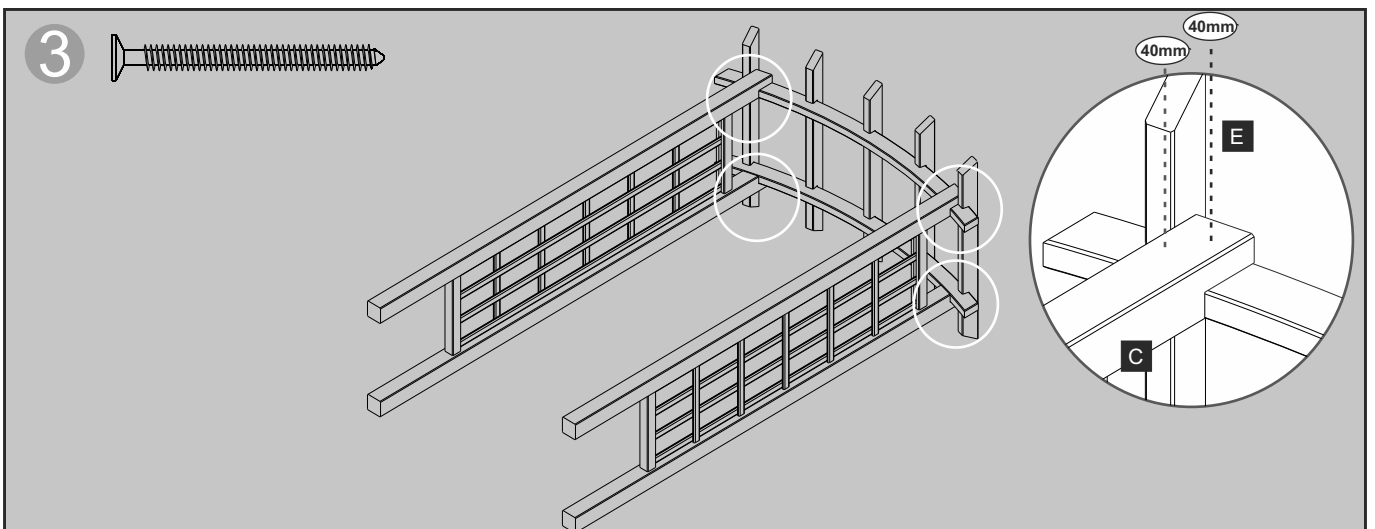

Position the rafter assembly into the notches in the post trellis assembly. Make sure the posts assemblies are 975mm apart (internal dimension). Secure using 2x40mm screws through each post into the rafter assembly.

ATTENTION:

Take care not to trap fingers whilst assembling the product

Forest Garden Ltd, Units 291 & 296 Hartlebury Trading Estate, Hartlebury, Worcestershire, DY10 4JB